RELEASE NOTES

TRIMBLE SURVEY GNSS FIRMWARE

Trimble Survey GNSS Firmware Version 4.64 (February 2013)

Requirements

This firmware version includes improvements to the Survey Receiver firmware. It is considered a minor revision. This requires a valid firmware support agreement of:

• March 2013 or later for the all other models

Supported GNSS Receivers

The following table identifies the Survey GNSS receivers supported by this revision.

Integrated	Receiver	Support
	Trimble R10	-
	Trimble R8 Model 4	-
	Trimble R8 Model 3	-
	Trimble R8 Model 2	•
	Trimble R8 Model 1	-
	Trimble R6 Model 4	-
	Trimble R6 Model 3	-
	Trimble R6 Model 2	•
	Trimble R6 Model 1	•
	Trimble R4 Model 3	-
	Trimble R4 Model 2	-
	Trimble R4 Model 1	•
	Trimble 5800 Model 1	-

Modular	Receiver	Support
	Trimble R7 Model 2	-
	Trimble R7 Model 1	-
	Trimble R5	-
	Trimble 5700 Model 2	-
	Trimble 5700 Model 1	-

held	Receiver	Support
	Trimble GeoXR	-
	Trimble R3	-
D		
a		
<u> </u>		

Survey Division, 10355 Westmoor Drive, Suite #100, Westminster, CO 80021, USA

© 2013, Trimble Navigation Limited. All rights reserved. Trimble and the Globe & Triangle logo are Trademarks of Trimble Navigation Limited registered in the United States Patent and Trademark Office and in other countries. All other trademarks are the property of their respective owners.



Version 4.64 Release Notes

The release notes describe the added features and improvements made to Trimble Survey GNSS receiver firmware.

Issue		Туре	R8 ¹	R6 ²	R4 ³
✓	Update to the latest release of antenna models	Feature	•	•	•
~	Correct power level settings for the GSM/GPRS cellular module	Fix	•	•	•
~	Correct Bluetooth communication dropping causing controller connection failures with Trimble Access and Trimble Survey Controller	Fix	•	•	•

1 R8 Model 1, R8 Model 2

2 R6 Model 1, R6 Model 2

3 R4 Model 1

Before you update the receiver, download and backup any data files that are on the receiver.

Download information

The latest version of Trimble Survey GNSS Firmware can be downloaded from the Trimble website within the support page of each supported receiver.

- 1. Go to www.trimble.com
- 2. Click on the Support & Training link in the blue banner at the top of the page.
- 3. Click on *Support A-Z List* on the drop-down menu.
- 4. Find your receiver on the list of supported products.

Hint: Click on the associated first character of your receiver type. All survey receivers full under "T" for "Trimble XX Receiver".

- 5. Click on the link for your receiver type.
- 6. Click on the *Downloads* link.
- 7. The latest firmware version should be located at the top of the page.
- 8. Click on the link to the latest version, in this case version 4.64 (packaged with 4.71 for newer receivers).
- 9. Your browser will begin downloading the latest Winflash utility installer that contains your firmware.
- 10. At this point you can save the Winflash installer to a local folder or click on *Run (Open)* to begin installing the utility.

Note: You may need to accept some security warnings based on your computer configuration.

Installing Winflash utility

At this point you will continue from the last step above or if you have saved the downloaded Winflash utility, you must navigate to the folder that contains the file and click on *WFC-Rx-5x-v464v471.exe*.

- 1. The Winflash installer will start. Click on the Next button.
- 2. Read the License Agreement and click on Yes to accept the terms.
- 3. At this point the Winflash installer will try to detect any previous versions of Winflash on your system
 - a. If the Winflash installer detected a previous version of Winflash on your computer, it will display the current Winflash folder in use. Click on *Next*.
 - b. If the Winflash installer does not detect a previous version of Winflash on your computer, it will ask you to accept the default folder for Winflash. If you do not want to use the default location then:
 - i. Click on the *Browse*... button and navigate to the desired folder location you would like to use.
 - ii. Click *Ok* to accept the new location.
 - iii. Click on Next to continue.
 - iv. Select the Program Folder location for the program icon, and then click on Next.
- 4. Winflash installer will now install all required files to run the Winflash utility.
- 5. The Winflash installer will now ask if you want to register Winflash. You have three options:
 - a. Register via the Internet (web access required)
 - b. *Register by Fax or Mail.* Selecting this option will open a document. Complete the document and fax or mail to Trimble.
 - c. Register Later.
- 6. The Winflash installation is now complete.

Loading new Firmware

Use the Winflash utility to install the latest firmware on your Trimble GNSS receiver.

- 1. Click on the Winflash icon added to the Start menu on your computer.
- 2. Click on the *Device type* (receiver group) for your receiver type.
- 3. Click on the *PC serial port* drop down menu to select the serial port your receiver is connected to.
- 4. Click on the *Next* button.
- 5. From the Operations list box, click on the Load GPS software operation.
- 6. Click on the *Next* button.
- 7. Click on the *Available Software* for you receiver and the firmware you just downloaded. If you have installed firmware before, the firmware versions are still available in the listing.
- 8. Click on the *Next* button.
- 9. The next screen shows the current settings and actions to be taken by the Winflash utility.
- 10. Click on the *Finish* button.
- 11. Winflash will now load the latest firmware onto your receiver. This procedure can take several minutes. If the firmware loads correctly, then click on the *Exit* button.

Previous Firmware and Release Notes

Previous versions of Firmware are available in the same location on the Trimble web site. Under the *Downloads* folder, you will find an archived folder.

Previous versions of the Release Notes are available in the same location on the Trimble web site. Under the *Documentation* folder, you will find an archived folder.