


## Remote engage switch components: Rocker switch

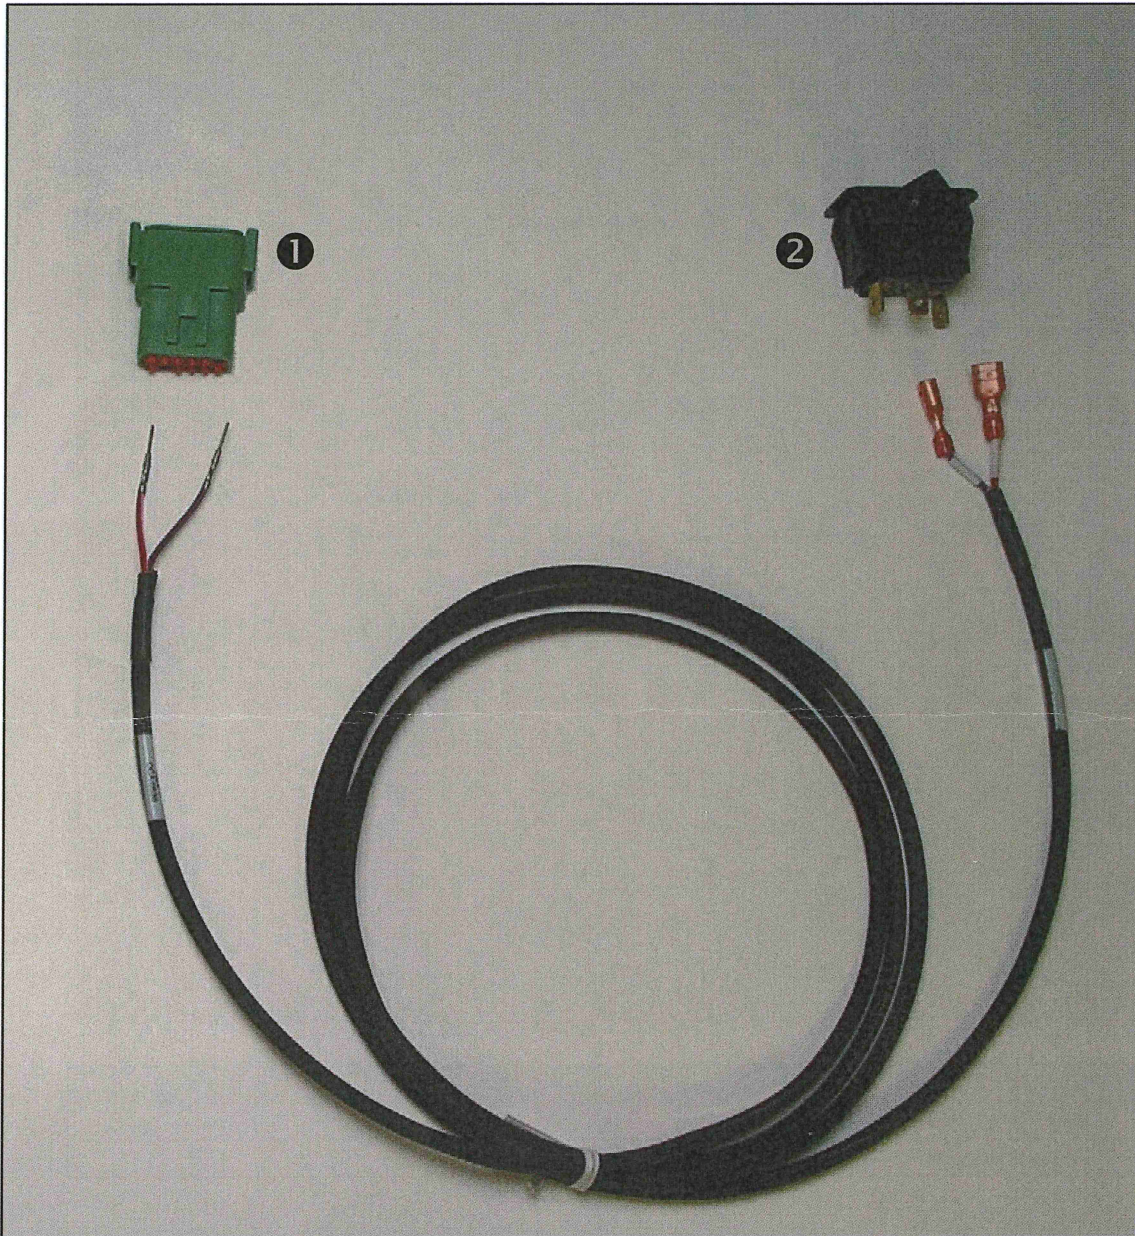


Item	Description
①	DTM receptacle
②	Remote engage rocker switch

*Note – This is a Full or Standard Euro switch, depending on the kit ordered.*



## Remote engage switch components: Foot switch

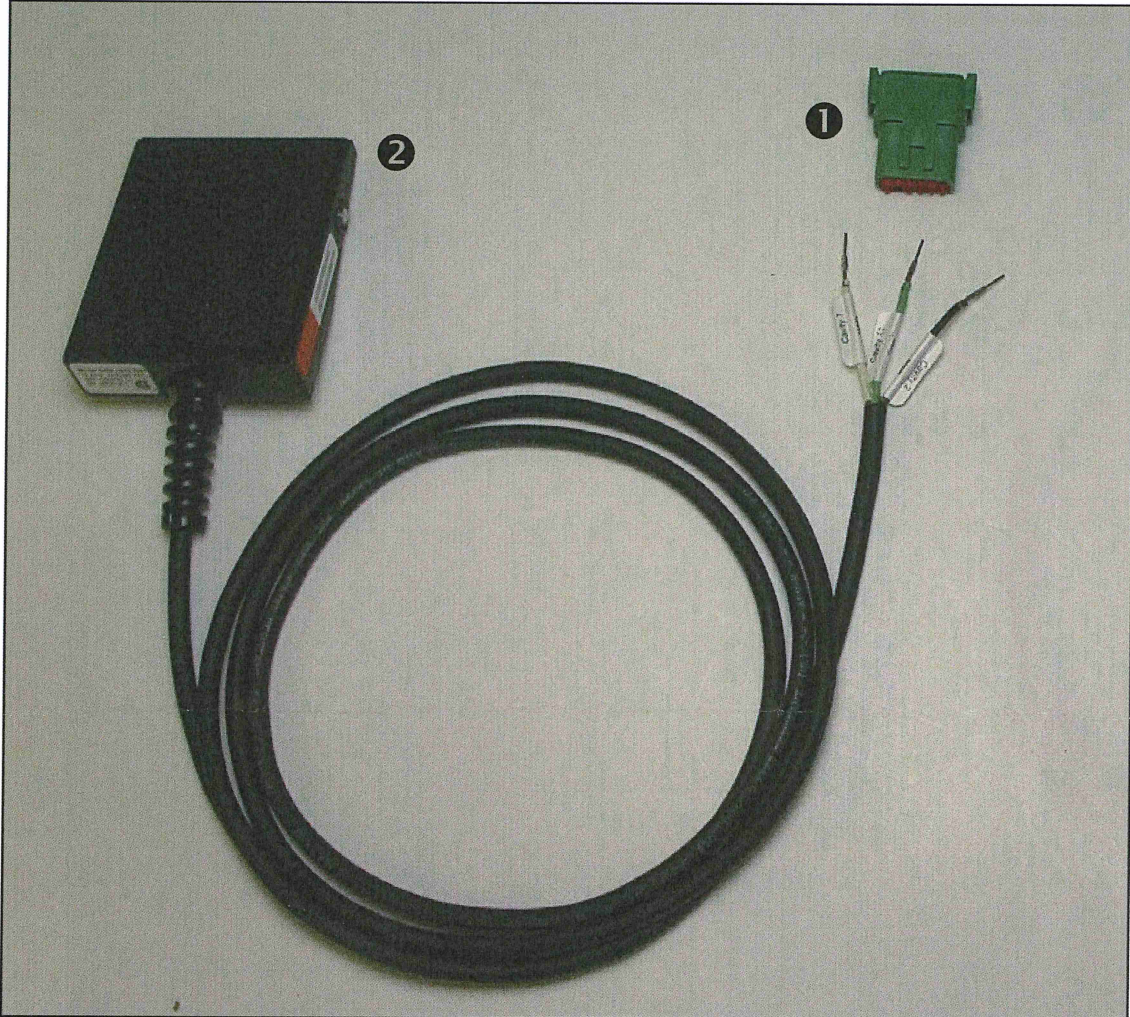


Item	Description
①	DTM receptacle
②	Remote engage foot switch

## Preparing the remote engage cable


### Step 1

Locate the green 12-pin Deutsch receptacle on the P-5 leg of the main controller harness. For more information, see [Chapter 8, Controller Installation](#).

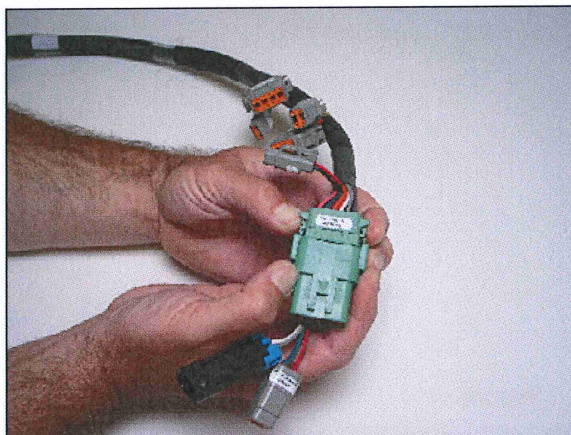

### Step 2


Remove the wedge from the connector.

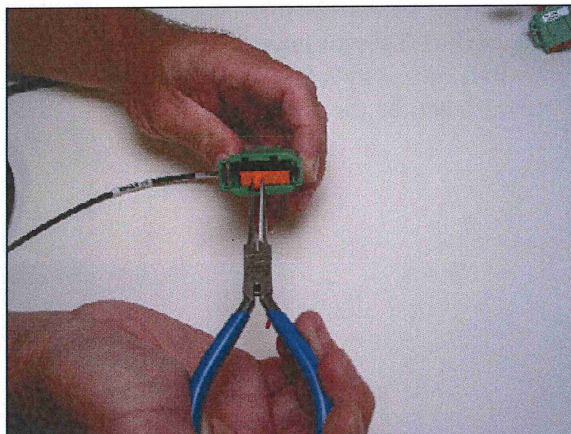

### Step 3

*Rocker switch only*


Remove the plugs from cavity 2 and cavity 7.

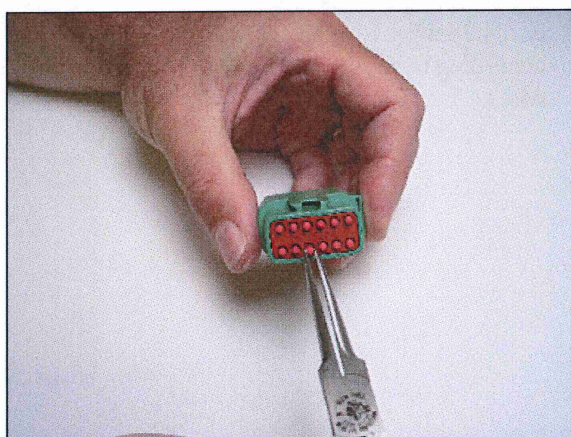



*Foot Switch Only*


Remove the plugs from cavity 2, cavity 7, and cavity 11.

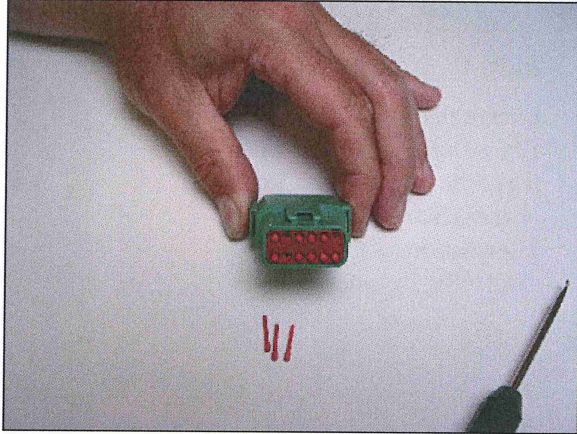

**Step 4**


*Rocker switch only*

Insert the DTM pins into cavity 2 and cavity 7, according to the labels on the wires.

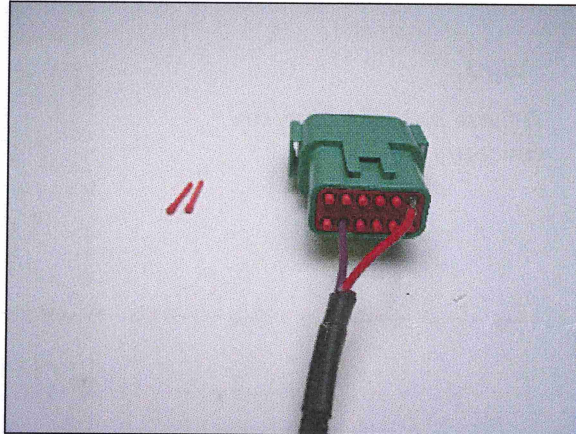

*Foot switch only*


Insert the DTM pins into cavity 2, cavity 7, and cavity 11, according to the labels on the wires.

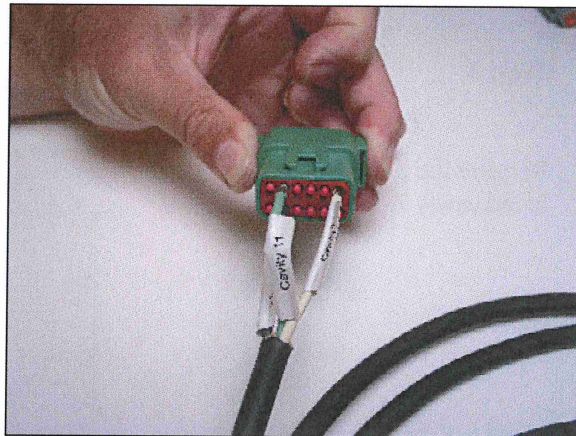



**Step 5**

Pull on the wires to seat them in place and then replace the wedge in the connector.

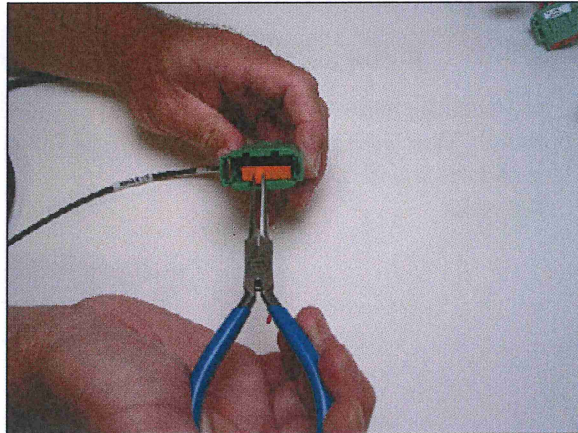

**Step 6**

Plug the assembled Deutsch receptacle into the P-5 leg of the Autopilot controller harness. See [Chapter 8, Controller Installation](#).

**Step 7**

*Rocker switch only*

Run the spade ends of the cable to a knockout location in the operator console.



*Foot switch only*

Run the cable to a clear location on the floor board. Use double-sided tape to secure the pedal. Route the cable under the floor mat.






**Step 8**

*Rocker Switch Only*

Connect the wires to the switch. Match the print on the switch body with the labels on the wires.

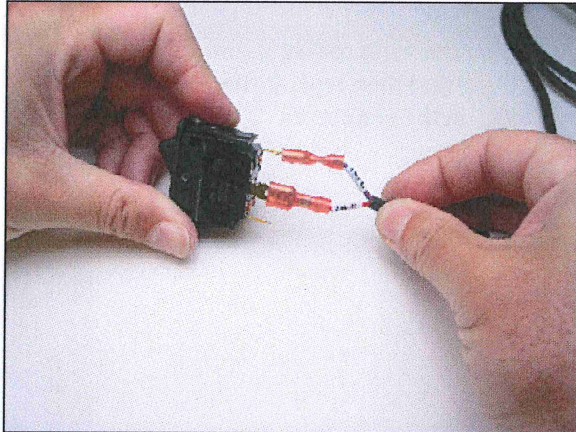

**Step 9**

*Rocker Switch Only*

Place the switch in the console.





## Using the remote engage switch

### Step 1

Hold the switch down for at least 0.5 seconds.

*Note – Holding the switch for less than 0.5 seconds will not engage the system.*

### Step 2

Release the switch between 0.5 and 4.0 seconds. When you release the switch, the vehicle will engage.



